

Quick Installation Guide


ALL-SG8210PM

Default Values:

IP-Adresse: 192.168.2.1
Username & Password: admin

Assign your PC an IP address by subnet 192.168.2.X (X = 2-254) with subnet mask 255.225.225.0

Start your browser and type the address 192.168.2.1 into the browser address field, confirm the IP address with enter.

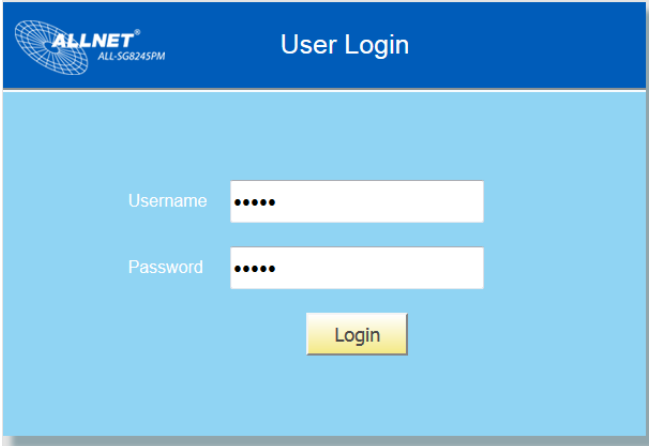

The screenshot shows the 'User Login' page for the ALLNET ALL-SG8245PM device. The page has a blue header with the ALLNET logo and the text 'User Login'. Below the header, there are two input fields: 'Username' and 'Password', both containing four dots to indicate masked text. A yellow 'Login' button is positioned below the password field.

RESET TO FACTORY DEFAULT:

Press the reset button for about 20 seconds.

Then the device will restart with factory default settings.



Safety Warnings

For your safety, be sure to read and follow all warning notices and instructions.

- Do not open the device. Opening or removing the device cover can expose you to dangerous high voltage points or other risks. Only qualified service personnel can service the device. Please contact your vendor for further information.
- Do not use your device during a thunderstorm. There may be a risk of electric shock brought about by lightning.
- Do not expose your device to dust or corrosive liquids.
- Do not use this product near water sources.
- Make sure to connect the cables to the correct ports.
- Do not obstruct the ventilation slots on the device.

ALLNET GmbH Computersysteme declares that the device **ALL-SG8210PM** is in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC or 2014/30/EU. The Declaration of conformity can be found under this link:

www.allnet.de/downloads.html

ALLNET GmbH Computersysteme
Maistrasse 2
82110 Germering

Tel. +49 (0)89 894 222 - 22

Fax +49 (0)89 894 222 - 33

Email: [info\(at\)allnet.de](mailto:info@allnet.de)